


SPDIF BOARD INSTALLATION (IN50-80-100 + PR100-200)



Information and technical help : 0033 2 33 48 44 06

OLD MODELS :

1- CUT THE 3 STRAPS ON THE BOARD (_/_/_)

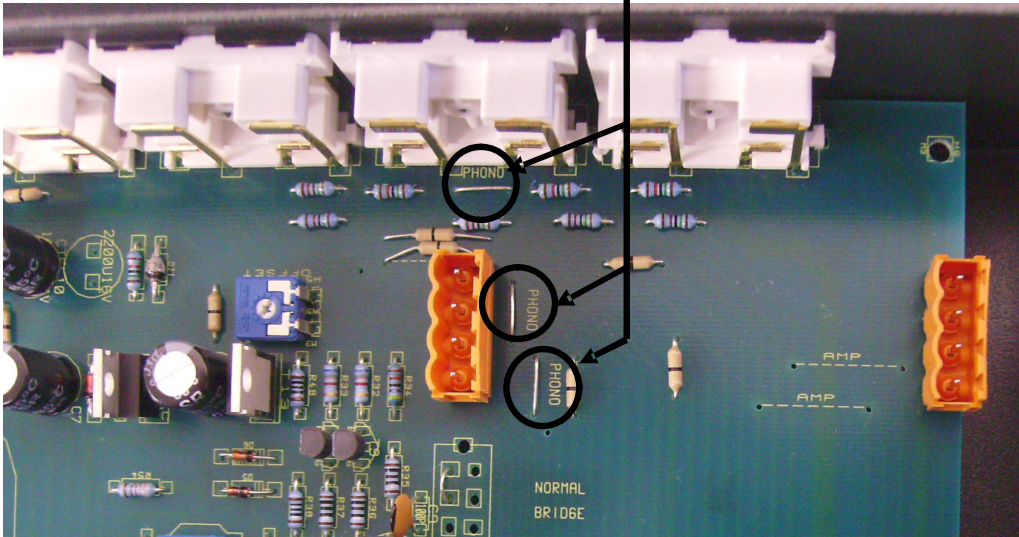

NEW MODELS : (SE LINE)

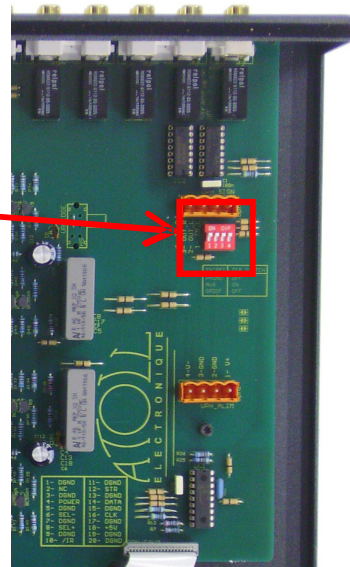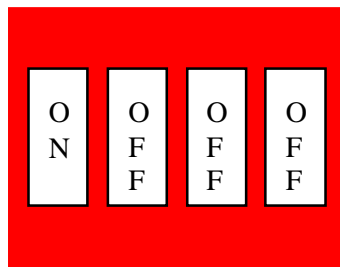

1- PLACE 4 DIL INTER AS SHOWN AHEAD


2- PLACE THE SPDIF BOARD IN THE ORANGE CONNECTORS ON THE MAIN BOARD (JUST ONE WAY POSSIBLE).

3- REMAIN : USE LEFT OR RIGHT (NEVER BOTH) AUX. INPUT.

SPDIF BOARD INSTALLATION (IN200 + PR300)

Information and technical help : 0033 2 33 48 44 06

1- PLACE 4 DIL INTER AS SHOWN BELOW :

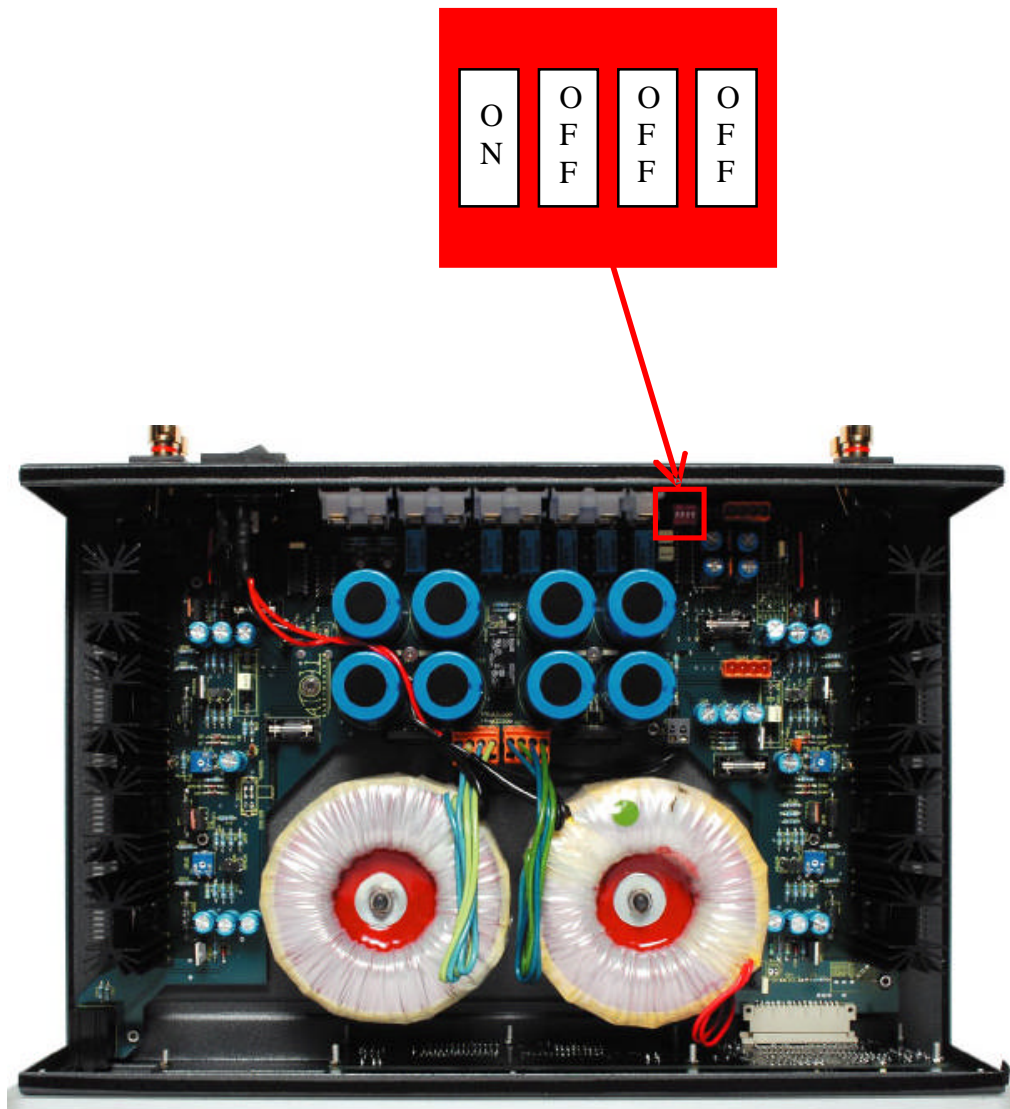

2- PLACE THE SPDIF BOARD IN THE ORANGE CONNECTORS ON THE MAIN BOARD (JUST ONE WAY POSSIBLE).

3- REMAIN : USE LEFT OR RIGHT (NEVER BOTH) AUX. INPUT.