

EMOTIVA®



ERC-4

Balanced Reference CD Player And Transport
User Manual

Important Safety Precautions and Explanation of Symbols



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important installation, operation, and service instructions in this manual.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltages within the enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to the user.

Please read this manual thoroughly before attempting to install, configure, or operate the Emotiva ERC-4. After successful installation and configuration of the ERC-4, be sure to retain this manual in a safe place for future reference.

Safety is a key component to a long lasting and trouble free installation. Please read and follow all instructions and heed all warnings on the ERC-4 and in this manual. The vast majority of the subsequent safety precautions are common sense. If you are not comfortable with the installation of audio/video entertainment equipment, you should seek the services of a qualified installation professional or call us for help.



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THE ERC-4 NEAR WATER OR IN WET LOCATIONS, DO NOT EXPOSE IT TO RAIN OR MOISTURE, DO NOT EXPOSE IT TO DRIPPING OR SPLASHING FROM OTHER SOURCES, AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS (SUCH AS VASES) ARE PLACED ON IT. DOING SO MAY RESULT IN DAMAGE TO THE ERC-4 AND THE RISK OF ELECTRIC SHOCK, WHICH MAY RESULT IN BODILY INJURY OR DEATH.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER FROM THE ERC-4. THERE ARE NO USER-SERVICEABLE PARTS INSIDE THE ERC-4. REFER ALL SERVICE TO QUALIFIED SERVICE PERSONNEL.

Do not install the ERC-4 near or above any heat sources such as radiators, heating vents, or other apparatus that produces heat. Do not block any ventilation openings or heat sinks. Avoid installing the ERC-4 directly above other heat-producing equipment unless sufficient ventilation or forced-air cooling is provided.

Do not install the ERC-4 in locations without proper ventilation. The ERC-4 should not be operated on a bed, sofa, rug, or similar surface that may block vents. The ERC-4 should not be installed in an enclosed location such as a bookcase, cabinet, or closed equipment rack unless sufficient ventilation is provided.

Always install your ERC-4 according to the manufacturer's instructions and only use attachments or accessories specified by the manufacturer.

Do not install the ERC-4 on any stand, shelf, or other piece of furniture that is unable to support its weight. If a cart is used to move the ERC-4, use caution to avoid injury from tip-over.

Connect the ERC-4 only to power sources of the correct voltage (as shown in this manual and on the ERC-4).

Protect power supply cables from being pinched, walked on, or otherwise damaged. Be especially careful where the power cable enters the power outlet and the ERC-4 unit.

Only connect the ERC-4 to an electrical outlet or extension cord of appropriate type and rating.

DO NOT defeat the safety purpose of a grounding or polarized plug by removing ground pins or using unsafe adapters. A polarized plug has two blades - one wider than the other. A grounding plug has a third ground prong in addition to the two main conductors. The wide blade or third groundling prong is provided for your safety. If the provided plug does not fit your outlet, consult an electrician to replace your obsolete outlet. If you replace the ERC-4 power cord, only use one of similar type and equal or greater current rating.

The power cable for the ERC-4 should be unplugged from the outlet during severe electrical storms, or when unused for a long period of time.

Only replace the fuse(s) in the ERC-4 with a fuse(s) of proper value and voltage rating.

The ERC-4 should only be cleaned as directed in the manual. Avoid spraying liquids directly onto the ERC-4 and NEVER spray liquids into the vents or CD Loader mechanism. Care should be taken so that small objects do not fall into the inside of the ERC-4.

You should seek service for your ERC-4 by qualified service personnel if any of the following occur:

- ! 1. The power-supply cord or the plug has been damaged.
- 2. Objects or liquid have fallen or spilled into the vents or CD Loader mechanism.
- 3. The ERC-4 has been exposed to rain.
- 4. The ERC-4 exhibits a marked change in performance.
- 5. The ERC-4 has been dropped, or its enclosure or chassis is damaged.

NOTE: TO COMPLETELY DISCONNECT THE ERC-4 FROM THE AC POWER MAINS, DISCONNECT THE AC POWER CORD FROM THE AC RECEPTACLE.

NOTE: THE ERC-4 AC POWER CORD MUST REMAIN READILY ACCESSIBLE AT ALL TIMES.

WARNING: THE ERC-4 IS A CLASS 1 LASER PRODUCT. REMOVAL OF PROTECTIVE COVERS, UNAUTHORIZED REPAIRS OR MODIFICATIONS, OR OPERATION NOT IN ACCORDANCE WITH THE PROCEDURES SET FORTH IN THIS MANUAL, MAY EXPOSE THE USER TO HAZARDOUS LEVELS OF LASER RADIATION. DO NOT REMOVE COVERS UNLESS INSTRUCTED TO DO SO BY AUTHORIZED PERSONNEL. DO NOT OPERATE THE UNIT WITH COVERS REMOVED. REFER ALL REPAIRS TO QUALIFIED SERVICE PERSONNEL.

WARNING: NEVER FORCE FOREIGN OBJECTS INTO THE CD LOADER MECHANISM. NEVER INSERT CRACKED, BROKEN, OR OTHERWISE DAMAGED DISCS INTO THE CD LOADER MECHANISM. DO NOT INSERT DISCS CONTAMINATED WITH EXCESSIVE DIRT OR STICKY MATERIALS INTO THE CD LOADER MECHANISM. DOING SO MAY RESULT IN MALFUNCTION OR PERMANENT DAMAGE (WHICH MAY NOT BE COVERED BY YOUR WARRANTY).



Emotiva ERC-4

*Differential Reference™ CD Player and Digital Transport
With High-Resolution Two-Channel Digital Audio Inputs*

Contents

Important Safety Precautions and Explanation of Symbols	
Introduction	2
About This Manual	3
Features	4
Unpacking.....	5
Supported Formats.....	6
Connections	6
ERC-4 Front Panel	8
ERC-4 Rear Panel.....	10
ERC-4 Remote Control	12
Basic Operation.....	15
Changing Remote Control Batteries.....	16
Specifications.....	17
Care and Maintenance	18
Troubleshooting	19
Emotiva Audio Corporation Five-Year Limited Warranty	20
FCC Compliance.....	22
Important User Information	22
Notes.....	23

Introduction

Thank you for choosing the Emotiva ERC-4 Differential Reference™ CD Player and Digital Transport. The ERC-4 combines a high-quality digital CD transport and a superb balanced DAC (digital-to-analog converter) in one convenient and attractive package. In addition to serving as an audiophile CD player and transport, the ERC-4 also offers both Coaxial and Optical S/PDIF (Toslink) digital audio inputs, so you can use it as a DAC in conjunction with any other digital audio gear that includes a S/PDIF output.

On the outside, a solid-aluminum face plate and faceted black trim contribute to the modern aesthetic of the ERC-4. On the inside, a heavy reinforced steel chassis delivers rugged reliability and prevents external influences from interfering with your listening experience, and the precision tray-loading disc mechanism handles your discs gently and carefully. Our cutting edge switch mode power supply provides clean electrical power, with vanishingly low levels of audible noise, and powers the precision digital-to-analog conversion section, and high-performance ultra-low-distortion analog circuitry. And, to top it all off, front panel buttons allow direct control of all of the ERC-4's commonly accessed features, while our all-metal infrared remote control puts command of the ERC-4 at your fingertips from across the room.

Whether you use the ERC-4 as a precision bit-perfect digital CD transport, as an audiophile CD player, or use its superb DAC to upgrade the output of your whole home digital audio system, the ERC-4 will elevate your digital audio listening experience to the next level.

The Emotiva Team.

About This Manual

This manual will provide you with all the information you need to get great sound, and many years of reliable service, from your ERC-4. The manual also includes a brief summary of the features offered by the ERC-4, and describes how the controls work and how to perform common operations.

You may wish to record serial numbers or other purchase information on the Notes page at the back of this manual.

Features

The Emotiva ERC-4 Differential Reference™ CD Player and Digital Transport is a two-channel audio CD player that combines rugged reliability, bit-perfect digital performance with both CD discs and external digital audio sources, and superb sound quality, in a single attractive and convenient source component. Here are just some of the exciting features offered by the ERC-4:

- Excellent technical performance *and* true audiophile sound quality.
- A dedicated CD player that plays all standard Red Book stereo audio CDs. (The ERC-4 can also play MP3 files from both CD-R and DVD-R discs and the Red Book audio CD layer of Hybrid SACDs).
- Toslink optical S/PDIF and coax S/PDIF digital inputs accept two-channel digital audio signals at up to 24/192k from other digital audio sources.
- Analog Devices AD1955 High-Performance Multi-bit Delta-Sigma DAC.
- Low noise ultra-low distortion LM4562 op-amps used in the I/V converter section.
- Switch mode power supply ensures a silent noise floor and eliminates all audible hum.
- Full assortment of digital outputs (Toslink optical S/PDIF, coax S/PDIF, and AES/EBU).
- Both balanced and unbalanced analog audio outputs.
- Machined, gold plated audiophile quality RCA unbalanced output connectors.
- Reinforced steel chassis for rugged reliability and isolation from vibration.
- Additional internal shielding and mass loading to minimize interference and vibration.
- High-reliability tray loading mechanism handles discs consistently and reliably.
- Solid machined aluminum face plate and faceted black aluminum trim.
- High visibility blue graphical OLED display.
- Front panel transport controls with blue halo illumination.
- Full function solid machined aluminum remote control.
- Motorized CD loading tray.
- Automatic universal line voltage operation (100 - 240 VAC).
- Standard IEC power receptacle (accepts all standard IEC power cables).

Unpacking

Your ERC-4 was carefully inspected and packed and should reach you in perfect condition. If you notice any shipping damage or other issues when you unpack it, please contact Emotiva immediately.

Gently remove your ERC-4 and its remote control from the packing carton, and remove all wrappings and shipping material.

It is important to save the box and all packing materials in case your ERC-4 ever needs to be moved or shipped back to the factory for service.

We truly value customer feedback and would like to hear from you.

Box Contents

- ERC-4 unit
- Remote control
- Power cable

Supported Formats

The CD transport on the ERC-4 supports all standard CDs that comply with the Red Book standard, as well as MP3 files recorded on both CD and DVD recordable media, including:

- Pre-recorded commercial audio CDs (Red Book standard).
- Audio CDs recorded on a computer or CD recorder (CD-Rs).
- The Red Book CD layer on Hybrid SACDs
(a Hybrid SACD has both a DSD/SACD layer and a standard Red Book audio CD layer).
- MP3 files recorded on both CD-R and DVD-R media.

The CD transport on the ERC-4 does NOT play:

- DVD-A audio discs.
- DVD audio or movie discs.
- Blu-Ray or 4k UHD audio or movie discs.
- Surround sound content recorded on any type of disc.
- Audio files on pre-recorded or computer recorded discs *OTHER THAN* the ones listed above.
- Non-hybrid SACDs (SACDs with only a DSD/SACD layer).

The digital optical S/PDIF and coaxial S/PDIF digital audio inputs on the ERC-4 accept:

- Two channel PCM digital audio files from 16/44k to 24/192k.

Connections

The ERC-4 may be connected as a stand-alone audiophile CD player, as a digital audio CD transport, and as a DAC which accepts digital audio from other sources. All outputs on the ERC-4, including both balanced and unbalanced analog audio outputs, and digital audio outputs, remain active at all times.

Using the ERC-4 as an audiophile CD player

To use the ERC-4 as an audiophile CD player, simply connect either the balanced (XLR) or unbalanced (RCA) stereo analog audio outputs to a line level analog input on your stereo preamp or a pre/pro. If your preamp has both types of inputs available, balanced connections are generally preferred. Both the balanced (XLR) and unbalanced (RCA) analog audio outputs on the ERC-4 remain active at all times.

Note: The analog outputs of the ERC-4 are designed to be connected to the inputs of a preamp or pre/pro that includes a volume control. DO NOT connect the outputs of the ERC-4 directly to the inputs of a power amplifier without a volume control; damage to your amplifier or speakers may result.

Note: On most preamps and pre/pros, all of the line level analog inputs are similar; you can use an input labelled Aux or Line In if your preamp doesn't have an available CD input.

Using the ERC-4 as a digital audio CD transport


To use the ERC-4 as a digital audio CD transport, simply connect one of the digital audio outputs to an appropriate digital audio input on your favorite DAC or pre/pro. All of the digital outputs are active at all times, and all carry the same signal.

Note: Even though the coaxial output uses a standard RCA type audio connector, it carries a digital signal, so we recommend that you use a cable intended for DIGITAL audio to connect it to an external DAC or other decoder (pre/pro). A regular analog audio cable may work over short distances, but performance and sound quality may be compromised.

Using the ERC-4 as a digital to analog converter (DAC)

To use the ERC-4 as a DAC, simply connect your digital audio source to one of the digital inputs on the ERC-4. The coax S/PDIF and optical S/PDIF inputs are separate, may be individually selected, and may be connected to different sources at the same time. Both digital audio inputs support ***two channel PCM stereo digital audio from 16/44k up to 24/192k***. Digital audio from the selected input will be decoded by the audiophile quality DAC in the ERC-4, and the resulting analog audio will be delivered via the analog outputs. In addition, the digital input signal will also be passed through the ERC-4, and delivered unchanged via the digital outputs.

ERC-4 Front Panel

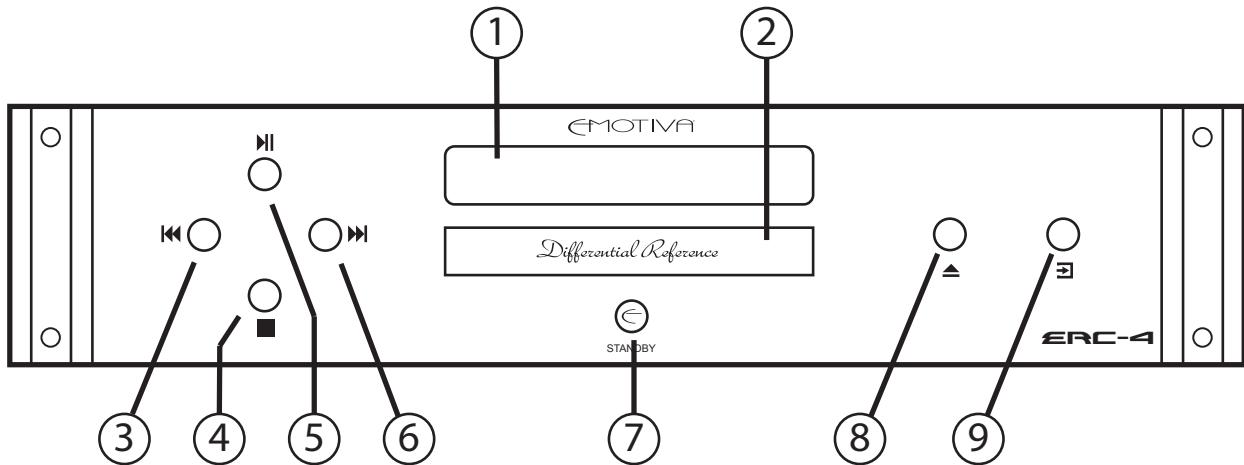

1. Front Panel Display

Bright, clear, easy to read blue OLED status display.

2. Motorized CD Loading Tray

Precision, motorized CD loading tray handles discs gently yet firmly.

Note: The CD Loading Tray opens and closes when you press the Open button on the front panel or the remote control. Pressing the Loading Tray part-way in by hand when it is open will cause it to close automatically.

Note: If you press the Open button while the CD Loading Tray is blocked, it will try to open for several seconds; if the tray remains blocked, it will close again after several seconds. While not recommended, this will NOT cause permanent damage.

3. Previous Transport Control Button

Press the Previous button once to return to the beginning of the previous song. Pressing this button repeatedly will move back one song each time you press it.

4. Stop Transport Control Button

Press the Stop button to stop the CD from playing. When you use the Stop button, the CD index will return to the beginning of the first track (when you press Play, it will start playing from the beginning of the first track).

5. Play / Pause Transport Control Button

When a CD is playing, press this button to temporarily stop playback. When a CD is paused, press Play / Pause again to resume playback from the current location.

6. Next Transport Control Button

Press the Next button once to move to the beginning of the next track. Pressing this button repeatedly will move forward one song each time you press it.

7. Standby (Power) Button

Press the Standby button to toggle the ERC-4 between Standby and On. The halo ring around the Standby Button will illuminate amber in Standby mode and blue when the ERC-4 is On. (The rear panel Power switch must be On to operate the ERC-4.)

8. Open (Open / Close) Transport Control Button

Press the Open button once to open the CD Loading Tray when it is closed; press the Open button once to close the CD Loading Tray when it is open.


9. Input Select Button

Press the Input Select button to cycle between playing an audio CD, and accepting an input from one of the two S/PDIF digital audio inputs. (OPT will display when the Optical S/PDIF input is selected; COAX will display when the Coax S/PDIF input is selected.)

Note: The control processor in the ERC-4 remembers the current location on every disc you play. If you insert a disc which you have previously played, or turn on the ERC-4 with a disc already inserted, it will resume playing at the location where playback of that disc was stopped the last time it was played on the ERC-4. To start playing the disc again from the beginning press the Play Button.

Note: The ERC-4 defaults to the CD Input. Therefore, if you turn on the ERC-4, it will select the CD Input as its audio source. If there is already a CD in the drive, it will start playing from the location where it was previously stopped.

ERC-4 Rear Panel

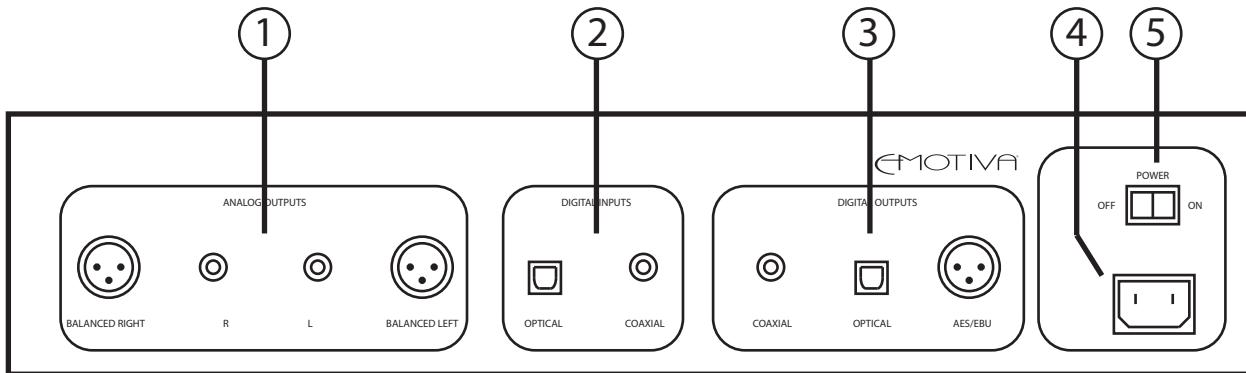

When playing standard Red Book audio CDs, all digital outputs on the ERC-4 are bit-perfect, and will operate at the sample rate and bit depth of the CD being played (Red Book CDs are all recorded at 44.1 kHz / 16 bits). When playing MP3 audio files, the digital audio will be output as stereo PCM at 44.1 kHz / 16 bits (but the audio quality will depend on the bit rate at which the MP3 files themselves are recorded).

1. Balanced (XLR) And Unbalanced (RCA) Analog Outputs

Connect these outputs to any balanced or unbalanced line level analog audio inputs on your preamp or pre/pro.

Note: *The analog outputs of the ERC-4 are fixed level, and are designed to be connected to the inputs of a preamp or pre/pro that includes a volume control. DO NOT connect the outputs of the ERC-4 directly to the inputs of a power amplifier that does not include a volume control; damage to your amplifier or speakers may result.*

Note: *On most preamps and pre/pros, all of the line level analog inputs are similar; so you can use an input labelled Aux or Line In if your preamp doesn't have an input labelled "CD", or if that input is already in use.*

2. Digital Audio Inputs

Connect these to a digital audio output from your computer, whole home audio system, or other digital audio source. The ERC-4 has both coax S/PDIF and optical (Toslink) S/PDIF digital audio inputs. These inputs accept **TWO CHANNEL PCM DIGITAL AUDIO from 16/44k to 24/192k**.

3. Digital Audio Outputs

If you wish to use the ERC-4 as a CD transport, connect one or more of the digital audio outputs on the ERC-4 to your favorite DAC, pre/pro, or other device that has a digital audio input.

The ERC-4 has three different digital audio outputs; AES/EBU, coaxial S/PDIF, and optical (Toslink) S/PDIF. All three digital audio outputs are active at all times. When one of the digital audio inputs on the ERC-4 is selected, as well as being converted into analog audio by the high quality DAC in the ERC-4, the digital audio signal from the input is also routed to the digital audio outputs.

4. IEC Power Cord Receptacle


Accepts a standard removable IEC AC power cable (a high-quality commercial power cable is included).

5. AC Power Switch

Switches the AC main power to the ERC-4 On and Off. When this switch is Off, the ERC-4 will not respond to the remote control.

ERC-4 Remote Control

The full function remote control provides complete detailed control over the ERC-4.

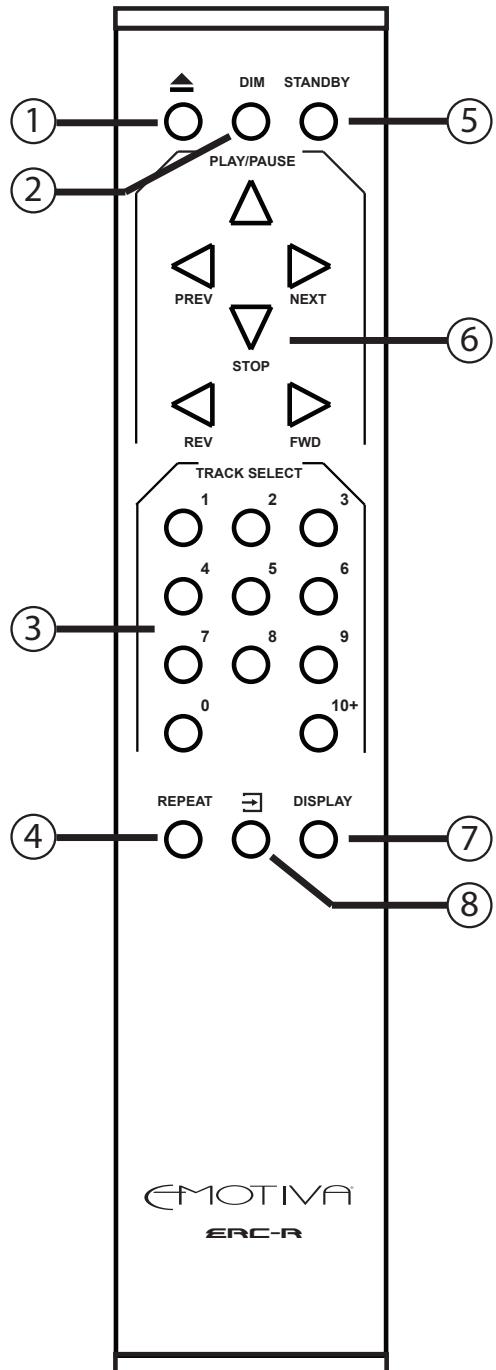

1. Open Button

Press the Open button to open the CD Loading Tray when it is closed; press the Open button to close the CD Loading Tray when it is open.

2. Dim Button

Press the Dim button to change the brightness of the OLED display and the front panel lighting. There are four brightness levels; the lowest level is Off; each time you press the Dim button the display brightness will increase by one step; after reaching maximum brightness, pressing the Dim button again will return the display to minimum brightness (off).

3. Number Buttons (1 to 10+)

Press a number to start playing the current CD from that track (the CD will then continue to play to the end). For track numbers above 10, press 10+ plus the second digit.

(For example, to play track 13, press the 10+ button followed by the 3 button.)

4. Repeat Button

Pressing the Repeat button while a CD is playing instructs the ERC-4 to repeat play one or all tracks. Press the Repeat button once to repeat the current track (the display will momentarily show REP ONE); press the Repeat button a second time to repeat all tracks (the display will momentarily show REP ALL); press the Repeat button again to return to normal operation (the display will momentarily show REP OFF).

5. Standby (Power) Button

Press the Standby button to toggle the ERC-4 between Standby and On. The halo ring around the Standby Button will illuminate amber in Standby mode and blue when the ERC-4 is On. (The rear panel Power switch must be On to operate the ERC-4.)

Note: *The control processor in the ERC-4 remembers the current location on every disc you play. If you insert a disc which you have previously played, or turn on the ERC-4 with a disc already inserted, it will resume playing at the location where playback of that disc was stopped the last time it was played on the ERC-4. To start playing the disc again from the beginning press the Play Button.*

Note: *The ERC-4 defaults to the CD Input. Therefore, if you turn on the ERC-4, it will select the CD Input as its audio source. If there is already a CD in the drive, it will start playing from the location where it was previously stopped.*

6. Transport Buttons

These buttons instruct the ERC-4 to start and stop playing a CD, and to move forward or back one full track.

Play/Pause Button - When a CD is playing, press this button to temporarily stop playback. When a CD is paused, press Play / Pause again to resume playback from the current location.

Stop Button - Press the Stop button to stop the CD from playing. When you use the Stop button, the CD index will return to the beginning of the first track (when you press Play, it will start playing from the beginning of the first track).

Previous Button - Press the Previous button once to return to the beginning of the previous song. Pressing this button repeatedly will move back one song each time you press it.

Next Button - Press the Next button once to move to the beginning of the next track. Pressing this button repeatedly will move forward one song each time you press it.

The Forward and Reverse Buttons instruct the ERC-4 to skip quickly forward or backward on the CD. The first time you press either button, the CD will start moving in the indicated direction at 2x normal speed, and you will hear the audio intermittently to allow you to note your current position. Pressing the button again will instruct the ERC-4 to move in the same direction at 4x speed; pressing it again will move to 8x speed; and pressing it again will move to 20x speed. Press the button a final time, or press the Play Button, to return to normal CD play.

Rev (Reverse) Button - Advances the track position toward the beginning of the CD.

Fwd (Forward) Button - Advances the track position toward the end of the CD.

Note: *Audio will be muted at all speeds above 2x.*

Note: *If you press the Rev or Fwd Button while moving rapidly in the opposite direction, your movement will switch to 2x in the direction of the button you have just pressed.*

7. Display Button

The Display button controls how the ERC-4 displays elapsed time.

By default, the display shows the time elapsed on the current track.

Press the Display button once to change the display to the time remaining on the current track.

Press the Display button again to change the display to the total time remaining on disc.

Press the Display button again to return to the default display (the time elapsed on the current track).

8. Input Select Button

Press the Input Select button to cycle between playing an audio CD, and accepting an input from one of the two S/PDIF digital audio inputs. (OPT will display when the Optical S/PDIF input is selected; COAX will display when the Coax S/PDIF input is selected.)

Note: The control processor in the ERC-4 remembers the current location on every disc you play. If you insert a disc which you have previously played, or turn on the ERC-4 with a disc already inserted, it will resume playing at the location where playback of that disc was stopped the last time it was played on the ERC-4. To start playing the disc again from the beginning press the Play Button.

Note: The ERC-4 defaults to the CD Input. Therefore, if you turn on the ERC-4, it will select the CD Input as its audio source. If there is already a CD in the drive, it will start playing from the location where it was previously stopped.

Basic Operation

Playing a CD

- The ERC-4 must be On in order to play a disc (the Standby button will be halo lit blue and the display and buttons will be illuminated).
- If the ERC-4 is in Standby mode (the Standby button halo lit amber), press the front panel Standby button or the Standby button on the remote control to turn the ERC-4 On.
- If the ERC-4 is powered off (nothing is lit), turn the ERC-4 On (into Standby mode) using the rear panel Power switch, then press the Standby button on the front panel or the remote control to turn the ERC-4 fully On.
- Press the Open button on the front panel or the remote control to open the CD Loading Tray.
- Place the CD carefully into the Loading Tray. The CD should be inserted with the playing surface down (label on top), centered in the shallow round depression in the tray.
- Press Open button again to close the tray and load the disc.
- The CD will load and start playing automatically when the Loading Tray is closed.

Note: *The control processor in the ERC-4 remembers the current location on every disc you play. If you insert a disc which you have previously played, or turn on the ERC-4 with a disc already inserted, it will resume playing at the location where playback of that disc was stopped the last time it was played on the ERC-4. To start playing the disc again from the beginning press the Play Button.*

Note: *The ERC-4 defaults to the CD Input. Therefore, if you turn on the ERC-4, it will select the CD Input as its audio source. If there is already a CD in the drive, it will start playing from the location where it was previously stopped.*

Ejecting a CD

- The ERC-4 must be On in order to eject a disc (the Standby button will be halo lit blue and the display and buttons will be illuminated).
- If the ERC-4 is in Standby mode (the Standby button halo lit amber), press the front panel Standby button or the Standby button on the remote control to turn the ERC-4 On.
- If the ERC-4 is powered off (nothing is lit), turn the ERC-4 On (into Standby mode) using the rear panel Power switch, then press the Standby button on the front panel or the remote control to turn the ERC-4 fully On.
- Press the Open button to open the CD Loading Tray (to eject the disc).
- Gently remove the disc.

Note: *It is acceptable to press the Open button while a disc is playing; the ERC-4 will automatically stop playing, then open the CD Loading Tray.*

Changing Remote Control Batteries

Emotiva recommends using high quality Alkaline or 1.5V Lithium AAA batteries in the ERC-4 remote control.

Installing the Remote Control Batteries

The back plate of the ERC-4 remote control is attached by magnets. To remove it, simply insert a small screwdriver into the slot on the back plate - toward the bottom - and pry gently.

To install batteries:

- Remove the back plate of the remote control.
- Locate the battery holder.
- Carefully insert the two batteries into the battery holder. The negative end of each battery should face the pressure spring in each section of the battery clip.
- Replace the back plate (the slot should be toward the bottom end of the remote control and the small metal loop next to the slot should be on the inside when the back is in place.)

Your remote control is now ready to use.

Note: Your ERC-4 may arrive with the batteries packaged separately, or the remote control may arrive with batteries already installed, but with a small insulator installed between one battery and the battery contact to prevent the batteries from discharging in shipping. If so, then simply follow the instructions for opening the remote control, and pull out the small insulator strip that is inserted between the end of the battery and the battery contact, before using your remote control.

Replacing the Remote Control Batteries

- Remove the back plate of the remote control.
- Locate the battery holder.
- Note the direction in which the batteries are installed in the holder.
- Remove the depleted batteries and dispose of them in accordance with the manufacturer's recommendations.
- Insert new batteries, taking care to insert them in the same orientation (facing the same way) as the original batteries.
- Replace the back plate (the slot should be toward the bottom end of the remote control and the small metal loop next to the slot should be on the inside when the back is in place.)

Your remote control is now ready to use.

Specifications

Connectivity:

Stereo balanced analog audio outputs: 1 set.

Stereo unbalanced analog audio outputs: 1 set.

Digital audio outputs: 1 Coax S/PDIF; 1 Toslink optical S/PDIF; 1 AES/EBU electrical.

Digital audio inputs: 1 Coax S/PDIF; 1 Toslink optical S/PDIF (stereo; up to 24/192k).

Output Level:

Balanced outputs: +12 dBV (4V RMS).

Unbalanced outputs: +6 dBV (2V RMS).

Frequency Response:

Red Book CD: 10 Hz - 20 kHz +0 /- 0.15 dB.

THD:

< 0.0015% @ 1 kHz.

< 0.01% (20 Hz - 20 kHz).

IMD (SMPTE 4:1):

< 0.005%

THD+N:

Red Book CD: < 95 dB (A weighted).

Crosstalk:

< 93 dB

Phase Deviation:

< 0.8 degrees (20 Hz - 20 kHz).

Power Requirements:

100 - 240 VAC (automatically detected).

Weight:

21 pounds (unboxed).

26 pounds (boxed).

Dimensions:

17 "W x 14"D x 4" H (unboxed).

23"W x 18"D x 7" H (boxed).

Care and Maintenance

Periodic Maintenance

Your ERC-4 requires no periodic maintenance or calibration.

Cleaning your ERC-4

- If necessary, the ERC-4 should be cleaned gently with a soft rag.
- If something sticky gets on the front panel or case of the ERC-4, it should be cleaned with a mild cleaning solution applied to a soft rag, followed by wiping with a clean rag dampened with plain water and drying with a soft dry rag or cloth.

Note: DO NOT spray water or cleaning solution directly onto the ERC-4 or into the vents.

- If something sticky gets on the remote control, it should be cleaned with a mild cleaning solution applied to a soft rag, followed by wiping with a clean rag dampened with plain water and drying with a soft dry rag or cloth.

Note: DO NOT submerge the remote control in liquid or spray water or cleaning solution directly onto it.

- If something sticky or gritty gets on the CD Loader Tray, you may clean the tray gently with a dampened rag. Be careful to avoid allowing any liquid to enter the mechanism, and be sure to dry the tray carefully before closing it or inserting a disc.

WARNING: If something sticky or gritty contaminates the inside of the ERC-4, please contact Emotiva Technical Support for instructions. DO NOT OPEN THE ERC-4 UNLESS INSTRUCTED TO DO SO. THERE ARE NO USER SERVICEABLE PARTS INSIDE.

Emotiva Audio Corporation Five-Year Limited Warranty

What does this warranty cover?

Emotiva Audio Corporation (Emotiva) warrants its products against defects in materials and workmanship. This warranty, and all rights provided hereunder, is granted to the original owner, and may be transferred by the current owner to a new owner if the unit is gifted or sold. In the event the original owner transfers ownership of the Product prior to the expiration of the applicable term described below, this Warranty shall terminate at the end of the original term.

This Warranty only applies to Products purchased directly from Emotiva or any of its Authorized Dealers or International Distributors.

Emotiva warrants any replacement product or part furnished hereunder against defects in materials and workmanship for the longer of the following: (i) the amount of time remaining under the original warranty, or (ii) 120 days from your receipt of the repaired or replaced product. The duration described in this paragraph is hereinafter referred to as the "Term".

TO THE FULLEST EXTENT PERMITTED BY LAW, ALL IMPLIED WARRANTIES RELATED TO THE ORIGINAL PRODUCT AND ANY REPLACEMENT PRODUCT OR PARTS (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE EXPRESSLY LIMITED TO THE TERM OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

The original owner must make a claim within the Term of the Warranty. A claim shall not be valid (and Emotiva has no obligation related to the claim) if it is not made within the Term and if it is not made in strict compliance with the requirements of the "How do you get service?" section.

How long does this coverage last?

The warranty on the ERC-4 commences on the date of retail purchase by the original retail purchaser. The ERC-4 is warranted for a period of five (5) years, with the exception of the transport mechanism. The transport mechanism, including its internal LASER mechanism, is warranted for a period of two (2) years. This warranty may be transferred by the current owner to a new owner at any time during the original term. Emotiva warrants any replacement product or part furnished hereunder against defects in materials and workmanship for the longer of the following: (i) the amount of time remaining under the original warranty, or (ii) 120 days from your receipt of the repaired or replaced product. The duration described in this paragraph is hereinafter referred to as the "Term".

What will Emotiva do?

Emotiva will, at its option, either: (i) repair the product, or (ii) replace the product with a new consumer product which is identical or reasonably equivalent (in Warrantor's sole discretion) to the product. In the event Warrantor, in its sole discretion, is unable to replace or repair the Product or it is not commercially practicable to do so, then: (i) if the claim was submitted during the first 365 days of the Term, Warrantor shall refund to you the purchase price that you paid for the

Product; and (ii) if the claim was submitted after the first 365 days of the Term, Emotiva shall issue you a credit equal to the purchase price that you paid for the product. The credit may only be used for the purchase of merchandise from Emotiva, and cannot be used for freight charges.

When a Product or part is repaired or replaced, any replacement item becomes your property and the replaced item becomes Emotiva's property. When a refund or credit is given, the Product for which the refund or credit is provided must be returned to Emotiva and becomes Emotiva's property.

What is not covered by this warranty?

This warranty does not apply: (i) to damage caused by use with products not manufactured by Emotiva, where the non-Emotiva product is the cause of the damage; (ii) to damage caused by service or maintenance performed by anyone who is not a representative of Emotiva; (iii) to damage caused by accident, abuse, misuse, flood, fire, earthquake or other external causes; (iv) to a product or part that has been modified after its retail purchase, where the modification caused or contributed to the damage; (v) to consumable parts, such as batteries or failure of or damage to the Product caused by batteries; (vi) if any Emotiva serial number has been removed or defaced on the product; (vii) glass or plastic panels, cabinetry, trim or other appearance items; (viii) cosmetic wear or damage to remote controls by user.

EMOTIVA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM OR RELATED TO ANY DEFECTS IN OR DAMAGES TO ITS PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

How do you get service?

In order to make a claim under the Warranty, you must:

1. Call or e-mail a customer service representative at 1-877-EMO-TECH (1-877-366-8324) or support@emotiva.com. You must provide a description of your problem, the serial number of the Product for which the warranty claim is being made, and the original purchase date.
2. Then, you will be provided with a warranty service authorization number ("WS").
3. Next, you must ship the Product to the following address, with the WS written in large, bold numbers on the outside of the box, and with the letters "WS" written before the number, for example: WS1234. Parcels arriving without a WS number on the outside of the box will be refused. The customer pays for the shipping to Warrantor. Warrantor pays for the shipping back to the customer within the continental United States only. Customer is responsible for shipping charges on all other warranty claims.

**Emotiva Audio Corporation
Attn: Repair Department
139 Southeast Parkway Court
Franklin, TN 37064**

Units will be refused by Emotiva for the following:

Product was sent without the WS#
Product was sent with inadequate packaging.
Product was damaged in transit.
Product was shipped collect for shipping charges.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

What if my product is damaged on the way to you?

Emotiva is not liable for damages that may incur while an item is in transport to us. Please purchase insurance when you ship your item. If your Product was not adequately packaged, we will refuse receipt and the damaged package will be returned to you at your cost. If you do not have the original Emotiva Audio packaging, please check with our sales department to purchase replacement-shipping cartons.

How does the Warranty and service apply to international orders?

The Product Warranty is only valid in the country where the Emotiva product was originally shipped via an authorized dealer, distributor, or direct from the Emotiva factory. The Warranty is subject to change at any time depending on the laws and regulations within your specific country. Please check with your distributor for a complete understanding of the warranty in your country.

If you purchased your Emotiva Product outside of the USA and wish to have it serviced at the factory, all freight charges are your responsibility. If you do not have an authorized distributor or repair center in your country, your Product must come back to the Emotiva USA factory for warranty service.

FCC Compliance

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important User Information

CAUTION - The use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION - No user serviceable parts inside unit. The unit is not to be opened or modified by the customer. **Exposure to harmful laser radiation may result.** No service is allowed by the customer. The unit must be returned to the factory for any service or repair.

Emotiva Audio Corporation
135 Southeast Parkway Court
Franklin, Tennessee
37064

This product complies with FDA Class 1 Laser certification during all modes of operation.

There is no scheduled maintenance necessary on this product.

Internal Laser Radiation Emission Parameters:

Wavelength 790nm (+/- 15nm)
CW power for classification <290 uW
Wavelength 650 nm (+/- 10nm)
CW power for classification <311 uW
No laser radiation above Class 1 levels is accessible to the user.

Label Data:

"Class 1 Laser product" (explanatory label)
location: Rear Panel

CLASS 1 LASER PRODUCT

Manufacturer's ID & Certification Statement


EMOTIVA AUDIO CORPORATION
135 Southeast Parkway Court
Franklin, Tennessee
37064
1-877-366-8324

Complies with FDA performance standards for laser products except
for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

EN/IEC 60825-1:2007

Notes

All information contained in this manual is accurate to the best of our knowledge at the time of publication. In keeping with our policy of ongoing product improvement, we reserve the right to make changes to the design and features of our products without prior notice.

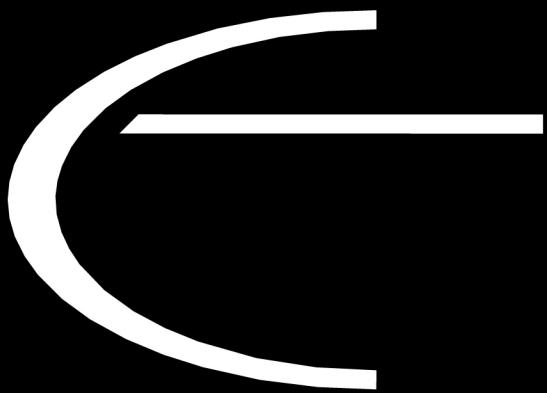

Emotiva Audio Corporation
135 Southeast Parkway Court
Franklin, TN 37064

www.emotiva.com