


User Manual


Subwoofer Module DS 4.0

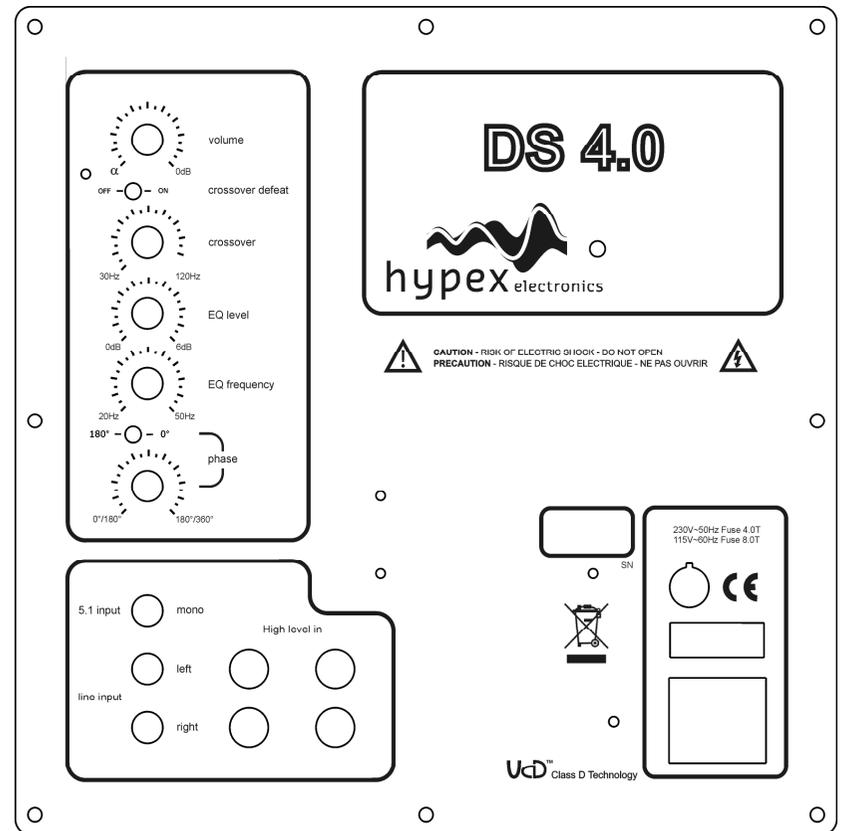

General safety instructions	3
Introduction	4
Connections	5
Crossover settings	6
Technical data / Warranty	7

Technical Data

Continuous output power (8 Ohm)	210 Watts (+0, -0.5dB)
Continuous output power (4 Ohm)	400 Watts (+0, -0.5dB)
Subsonic-filter	12Hz / -3dB, 24dB/Octave
Phase	0° - 180°, 180° - 360°
Crossover frequency subwoofer	30Hz - 120Hz, 18dB/Octave
Bassboost	20Hz - 50Hz
Bassboost level	0dB - +6dB
Damping factor	1000
Protection	Output shortcut / DC-error
Crossover filtering	Linkwitz-Riley, 18dB/Octave
Input impedance RCA	10 kOhm
Input impedance high level	1 kOhm
Dimensions	267mm x 267mm x 70mm (W x H x D)
Weight	4.1 kg

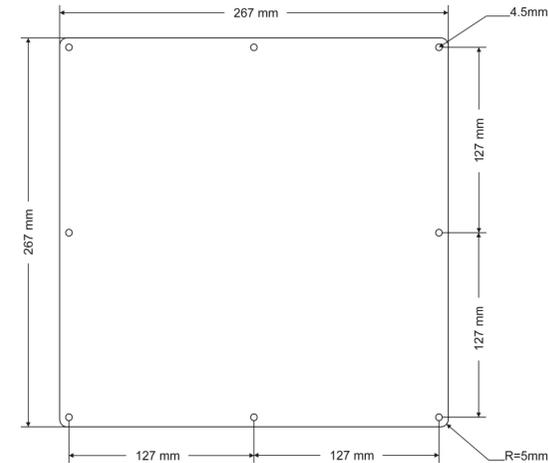


Warranty

The work carries warranty out for all provable material and production defects for the duration of 12 months starting from sales. All damage, which is caused by wrong or inappropriate operation, is excluded from the warranty.


Crossover settings

Crossover example 1.

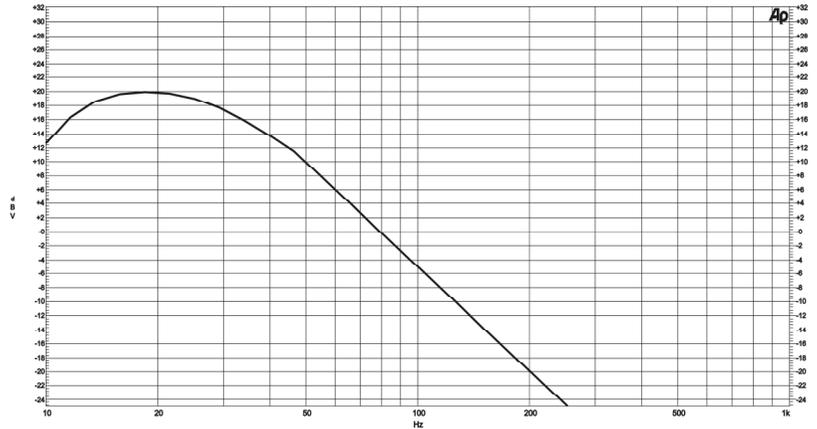

Crossover frequency is set to 30Hz.

Crossover example 2.

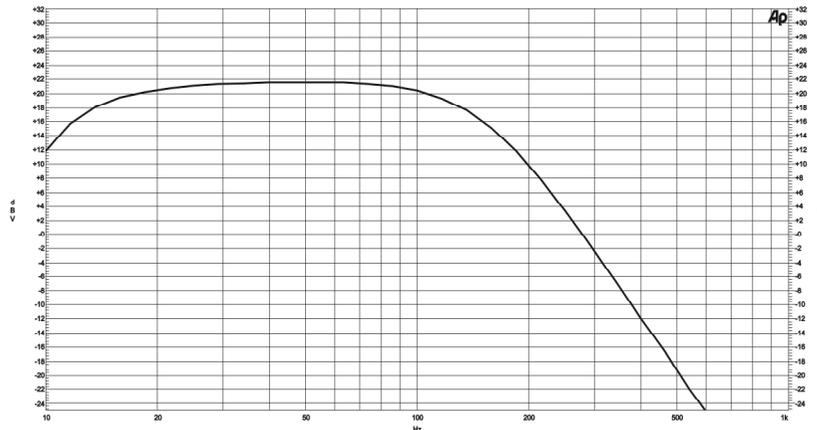

Crossover frequency is set to 120Hz.

CAUTION

NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: SHOCK HAZARD.
AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR.

CAUTION: REPLACE FUSE WITH SAME TYPE AND RATING.
ATTENTION: UTILISER UN FUSIBLE DE RECHANGE DE MÊME TYPE.

DISCONNECT SUPPLY CORD BEFORE CHANGING FUSE.
ATTENTION: DEBRANCHER AVANT DE REMPLACER LE FUSIBLE.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.


GENERAL SAFETY INSTRUCTIONS

1. Read instructions. Read the safety and operating instructions before operating the appliance.
2. Retain instructions. Retain the safety and operating instructions for future reference.
3. Water and moisture. Do not use the appliance near water, for example near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
4. Heat. Site the appliance away from heat sources such as radiators, heaters, stoves, or other appliances that produce heat.
5. Power cord protection. Route power cords so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, power sockets, and at the point where they exit from the appliance.
6. Unplug this apparatus during lightning storms or when unused for long periods of time.
7. Objects and liquid entry. Take care not to let objects or liquids fall into the product.
8. The product should be serviced by qualified personnel only.

REPLACING THE FUSE

Should the mains fuse blow, replace it only with an equivalent part. The fuse holder is located just below the mains inlet socket. To replace the fuse, disconnect the product from the mains supply. Using a flat blade screwdriver remove and replace the fuse. Contact your local retailer.


Introduction

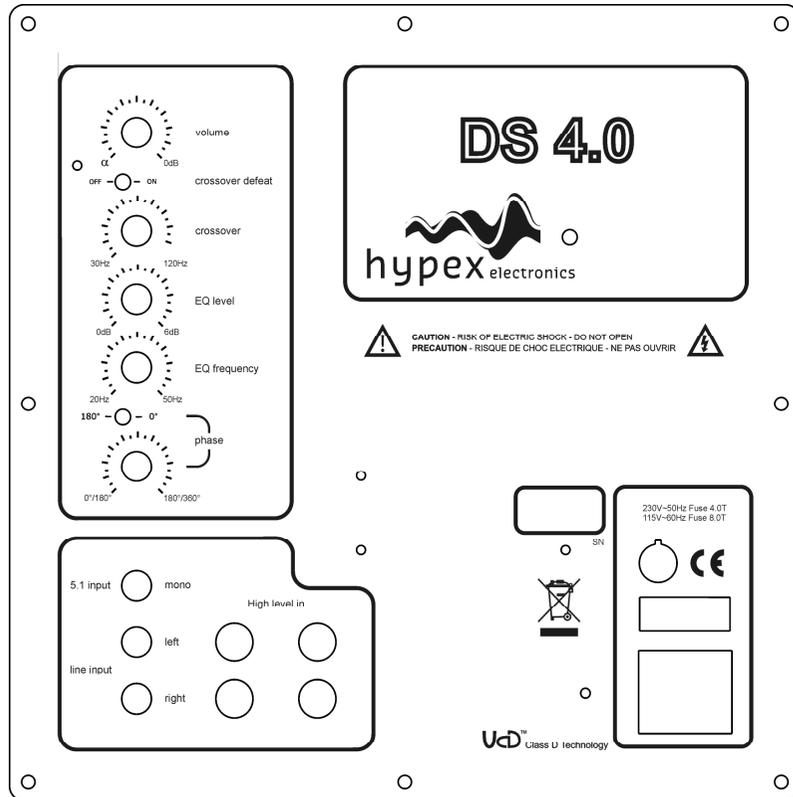


- High efficiency Class D design.
- Active subwoofer amplifier.
- Power output 400 Wrms into 4 ohms.
- Crossover filter, 18dB/octave.
- Subsonic-filter 12Hz, 24dB/octave.

The DS 4.0 is a state-of-the-art Class D amplifier module for active subwoofer use. Accurate rendition of the low bass range is a substantial component of a high-quality music reproduction. For an impressive bass rendition large loudspeakers are unfortunately inevitable. If you prefer small loudspeakers for optical reasons, you can use the DS4.0 to extend your bass rendition. The crossover frequency is adjustable steplessly between 30Hz and 120Hz. Due to this large range of control a problem-free connection is possible to different subwoofer and other loudspeaker systems. Additionally this active system has a low bass rise. An active 4th order subsonic filter with Butterworth characteristic protects the loudspeaker against mechanical overloading, since the ultralow portion of the fed signal would cause extreme diaphragm deflections.

Connections

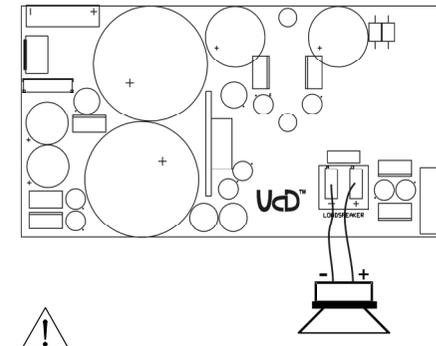

Be sure to disconnect the DS4.0 from the mains before proceeding!
Connect the loudspeaker, wired with wire of sufficient cross-section (2.5mm² or 13AWG), to the amplifier board as shown in the picture above. Use suitable crimp connectors and crimp them with a suitable crimp tool. Check the voltage selector on the front panel and make sure the voltage is set according the mains voltage used in your country.

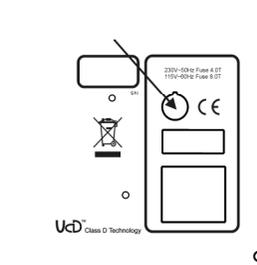

Mains voltage selector.